


JCHR35W5A8/A9/C4

Remote Controller


User Manual

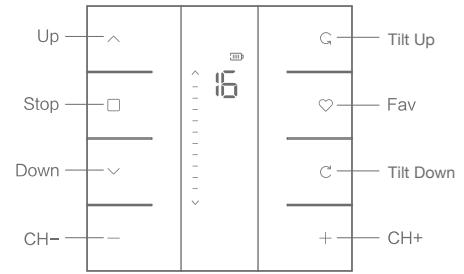


JCHR35W5C4
16-channel remote controller

01 Product Info

a.Front

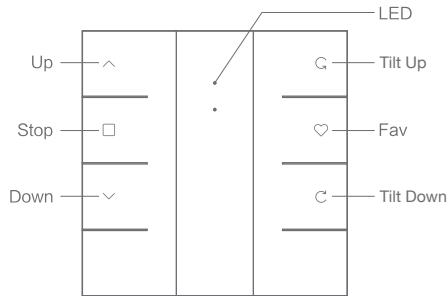


JCHR35W5A8
Single channel remote controller

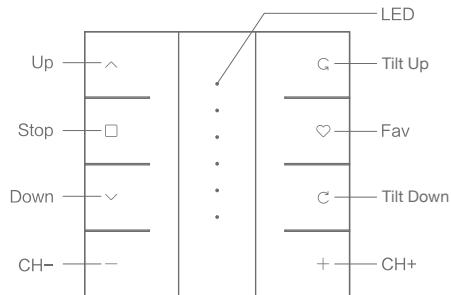

JCHR35W5A9
6-channel remote controller

b.Back

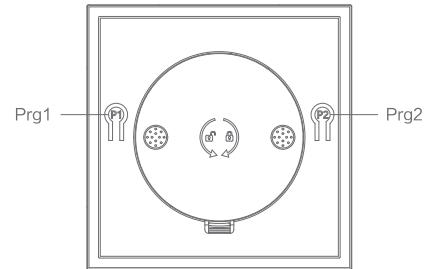

JCHR35W5A8/A9/C4

02 Models & Parameters (more info please refer to the nameplate)

Electrical Specification	Standard
Battery Type	CR2430*3V*2
Working Temperature	-10°C~50°C
Radio Frequency	433.92M ± 100KHz
Transmit Distance	>=30m indoor


03 Caution!



1. The transmitter should not be exposed to moisture or impact, so as not to affect its life
2. During use, when the remote control distance is significantly shorter or less sensitive, please check whether the battery needs to be replaced.
3. When the battery voltage is too low, JCHR35W5A8, JCHR35W5A9 orange LED flickers when you press button, while JCHR35W5C4 LCD screen will show a low voltage pattern "  " indicating to replace battery.
4. Please properly dispose of used batteries according to the local garbage classification and recycling policy.

04 Instructions

a.Channels & Groups Toggling (only apply to JCHR35W5C4)

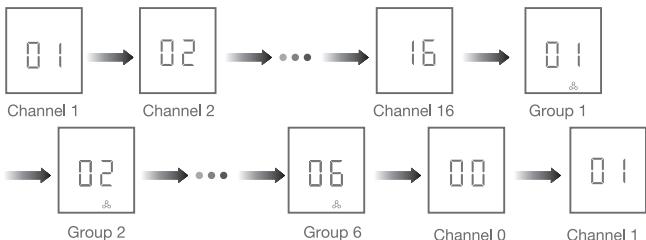

or → To toggle
Short Press


Note: Channel 0 is the group control for all the channels.

b-1.Number of Channels Setting for JCHR35W5C4



Note: Max&Min number is 16&1 when it's set under channel 1-16.

b-2.Number of Channels Setting for JCHR35W5A9

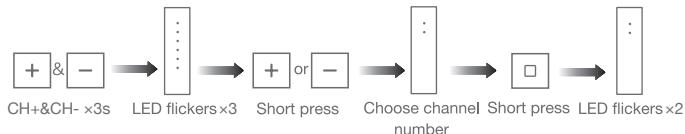

→ Complete


Note: When all LEDs are lit, that is channel 0 (All channels move together).

c.Number of Groups Setting (only apply to JCHR35W5C4)




Note: Max&Min number is 6&0 when it's set under channel 0.

d.Channel in Group Setting (only apply to JCHR35W5C4)

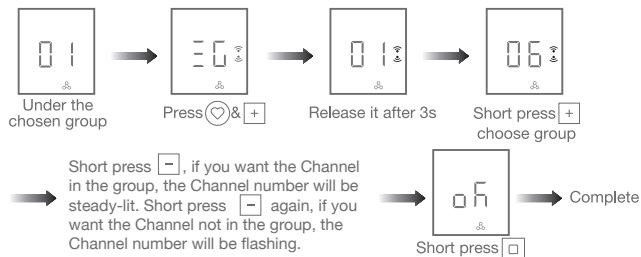

Note: Channel in groups setting is under GROUP 1-6.

e.Check the Channels in Groups (only apply to JCHR35W5C4)

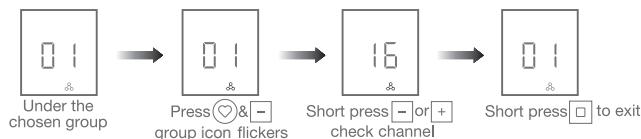

Note: LCD will show "EC" if there is no detailed channel.

f.Prohibit Dual-key Operation




JCHR35W5A8, JCHR35W5A9 remote controller LED will flickers thrice, not show a lock pattern.

② Repeat the above, dual-key operation activated

Note: When dual-key operation prohibited, these programming setting functions are not allowed, such as limits setting.

g.Position Percent Setting (only apply to JCHR35W5C4)

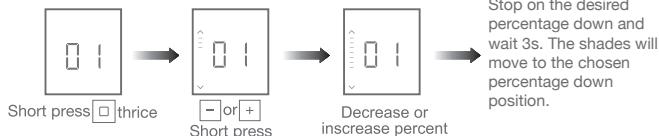

Note: All the shades under same group will run to same position after percent setting.

h.For other operations, please refer to the motor operation instruction