


# JCHR35W6A1/A2/A3/A4/A5


## Hand-held Remote Controller

### User Manual


01 Product Info

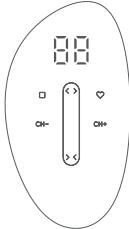


JCHR35W6A1  
16-channel remote controller  
Application: Roller shade/Curtain

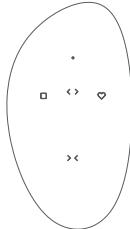


JCHR35W6A2  
Single channel remote controller  
Application: Curtain

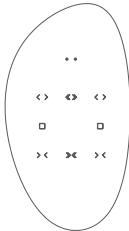


JCHR35W6A3  
Single channel dual control remote controller  
Application: Curtain

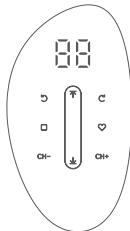


JCHR35W6A4  
16-channel remote controller  
Application: Venetian blind

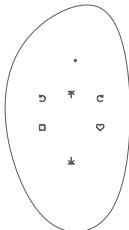


JCHR35W6A5  
Single channel remote controller  
Application: Venetian blind

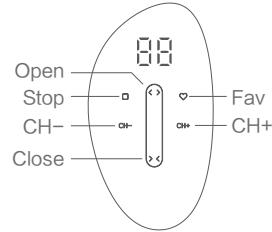


JCHR35W6A1

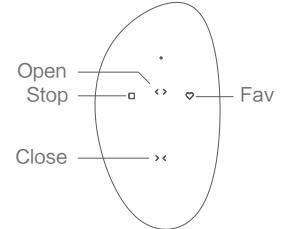


JCHR35W6A2

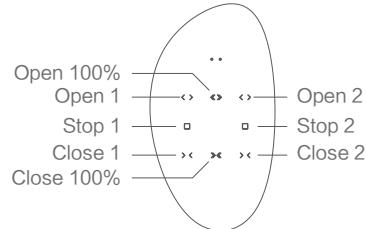

JCHR35W6A3

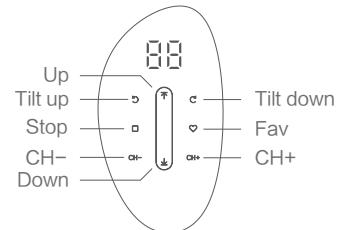


JCHR35W6A4

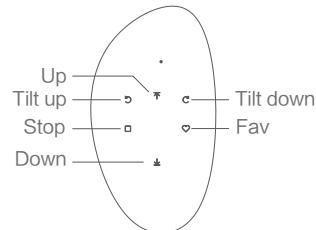


JCHR35W6A5

b.Back

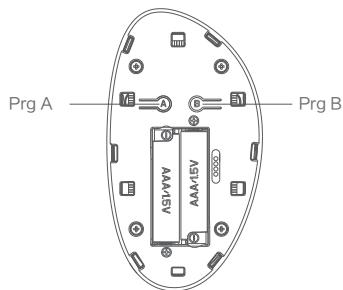

b. Low Voltage Warning (only apply to JCHR35W6A2/A3/A5)

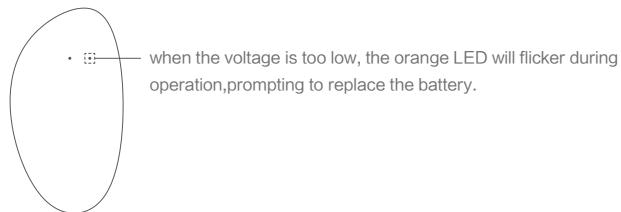

### 03 Models & Parameters (more info please refer to the nameplate)

Electrical Specification	Standard
Battery Type	AAA battery*2
Working Temperature	-10°C-50°C
Radio Frequency	433.92M ± 100KHz
Transmit Distance	>=30m indoor

c.For other operations, please refer to the motor operation instruction


### 04 Caution!



1. The transmitter should not be exposed to moisture or impact, so as not to affect its life.
2. During use, when the remote control distance is significantly shorter or less sensitive, please check whether the battery needs to be replaced.
3. When the voltage is too low, JCHR35W6A2/A3/A5 orange LED will flicker during operation, JCHR35W6A1/A4 LCD screen digital display will be weak, indicating to replace the battery.
4. Please properly dispose of used batteries according to the local garbage classification and recycling policy.

### 05 Instructions

a. Number of Channels Setting (only apply to JCHR35W6A1/A4)

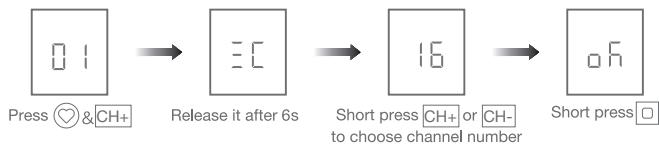

→ Complete

Note: Max&Min number is 16&1 when it's set under channel 1-16.