
Tubular Motor with Built-in Li-ion Batterv (With Adapter Charging)

User Manual

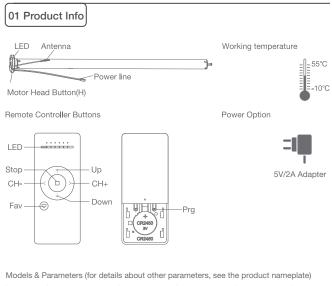

JCD	25	S	LE	11	30
DC Motor			LE: With built-in Li-ion battery	Torque: 1.1 N.m	Speed: 30 rpm
		P: Performance			

02 Caution!

1. This product is for indoor use only, do not use outdoor or in humid environments. 2. This motor has a built-in rechargeable Li-ion battery pack with integrated charge

management. Max input voltage: 5V/2A.

3.Please charge it before using for the first time, make sure it is fully charged before first use 4.When the battery voltage is low, LED will flicker 8 times to give a low-voltage alarm when motor starts.

5. The motor will jog in operation, please do not proceed to the next step until it complete. 6.During operation, the effective interval of the transmitter button operation is 10 seconds. If there is no effective transmitter operation for more than 10 seconds, it will automatically exit the current mode.

7. The motor can be paired with max 10 controllers.

8.Please do not use motor when charging.

9.Upper&Lower limits cannot be set at the same position, limits saved even power off.

10. The motor runs constantly for at 6 mins max without any other operation.


11.Do not lift the motor by grabbing the wire or antenna.

03 Instructions


Motor head button (H) functions

Functions	Operation	Jogging time	LED lamp flickers	Note
Control the UP/STOP/ DOWN of the Shade	Short press	/	/	Can only operate after the limits are set and motor is not in sleep mode
Adding/Removing Controller	Hold for 2s	Jog*1	Flicker*1	Operation needs be done within 10s
Sleep mode, RF Control Inactive	Hold for 6s	Jog*2	Flicker*2	Hold H button for 6s, jog twice to show the motor RF control is inactive; Hold H button for 2s, the RF contro is active again
Direction Reverse	Hold for 10s	Jog*3	Flicker*3	All settings saved alter direction reversed
Reset	Hold for 16s	Jog*4	Flicker*4	All settings deleted

a.Pairing Motor with Controller

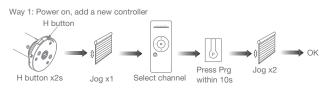



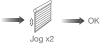



Note: Pairing can not be done under group channel or 0 channel.




Up Shade goes up Down Shade goes down

If the limits are not set, and direction goes opposite.

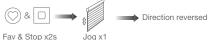

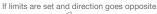


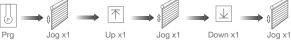




Note: Do reverse the direction when it goes opposite.

c.Upper&Lower Limits Setting

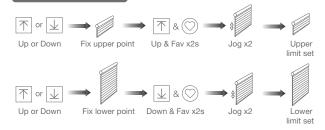

Note: Upper&Lower limits cannot be set at the same point.

Before limits set, the motor will run in one-touch mode by pressing Up or Down, hold Up or Down for 2s, motor runs in constant-touch mode. Once limits set, press Up or Down, motor runs in constant-touch mode.

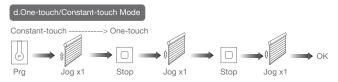


Same operation can toggle from one-touch to constant -touch mode.

Note: When motor in one-touch mode, hold Up or Down for more than 2s, it will run in constant-touch mode.

e.Setting and Cancelling Favorite Position





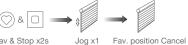


Fav. position

f.Hot key to the Fav. Position


(〇) Fast get to the Fav. point Fav

Note: The Fav.position setting only can be done after upper&lower limits set.

g.Adjusting Upper & Lower Limits

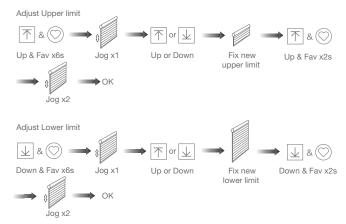


Note: The operation should be done within 4mins.

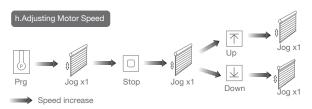

Speed decrease


Note: If motor doesn't jog, the max/min speed has already been reached. There are 3 speeds adjustable.

.Removing Controllers

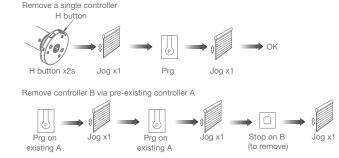

Controller B removed


Remove all controllers

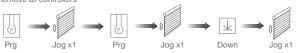

All controllers removed

Note: All the settings are saved even controllers removed(limits set are saved). Controller A/B are already paired to motor.



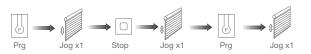

Limits cancelled

Note: It is forbidden to run the motor if installed into the shade without limits. Limits should be set immediately to protect the shade.



Note: The shade running to the lower limit indicates that the battery power is 100%. The shade running to the upper limit indicates that the battery power is 0%. For example, if the shade is closed at 70%, it means the remaining battery power is 70%.

04 Troubleshooting		
Fault	Cause	Solution
Motor does not work	1.Controller not paired 2.Motor inactive 3.Low battery	1.Add controller 2.Hold H button for 2s to activate motor 3.Charging
Motor stops suddenly	1.Upper & Lower limit set incorrectly 2.Shade exceed rated load 3.Low battery	1.Re-set Upper & Lower limits 2.Adjust load 3.Charging
LED flickers 8 times on motor head when motor starts	Low battery	Charging