
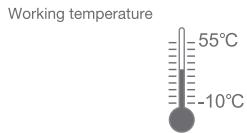



JCC50SLEU Curtain Motor User Manual

01 Product Info

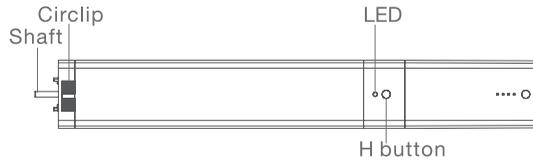


Remote controller buttons

Front

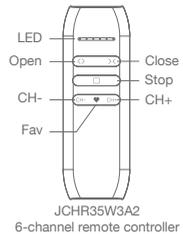

Back

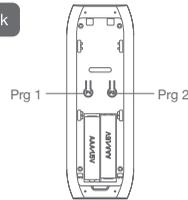


Models & Parameters (for details about other parameters, see the product nameplate)


JCC	50	S	LE	U	12	14
Curtain motor	Tube Diameter: 50mm	S: Standard	LE: With built-in Li-ion battery	USB Port	Torque: 1.2 N.m	Speed: 14cm/s

02 Installation


Step 1: Insert motor shaft in arrow direction into the drive pulley

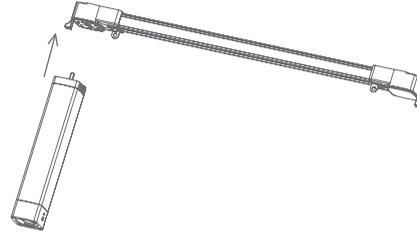

Step 2: Rotate motor and circlip reset automatically

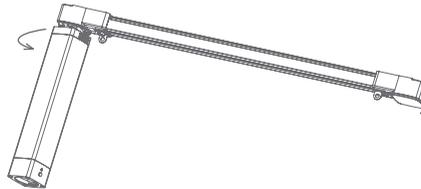

Step 3: Check circlip position

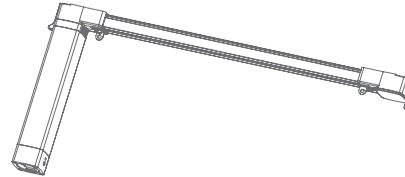

Removing operation is the same as the installation

03 Installation of battery pack

Step 1: Prepare the battery pack as the direction shown



Step 2: Insert battery pack to the motor



Step 3: Rotate the battery pack so that the buttons of motor and battery pack are in same direction



The operation of removing battery pack is the same as the installation

04 Caution!



1. This product is for indoor use only, do not use outdoor or in humid environments.
2. This motor has an external rechargeable Li-ion battery pack with integrated charge management. Max input voltage: 5V/2A.
3. Please charge it before using for the first time, make sure it is fully charged before first use.
4. When the battery voltage is low, LED will flicker 8 times to give a low-voltage alarm when motor starts.
5. The motor will open & close in operation, please do not proceed to the next step until it complete.
6. During operation, the effective interval of the transmitter button operation is 10 seconds. If there is no effective transmitter operation for more than 10 seconds, it will automatically exit the current mode.
7. The motor can be paired with max 10 controllers.
8. The open & close limits cannot be set at the same point. Limits saved even power off.
9. The motor runs constantly for at 6 min max without any other operation.
10. With soft start & stop function, the motor will start and stop slower to make it run elegantly.


05 Instructions

Motor head button (H) functions


Functions	Operation	Jogging Time	LED lamp flickers	Note
Control the OPEN/STOP/CLOSE of the Shade	Short press	/	/	Can only operate after limits are set and motor is not in sleep mode
Adding/Removing Controller	Hold for 2s	Open & Close *1	Flicker*1	Operation needs be done within 10s
Sleep Mode, RF Control Inactive	Hold for 6s	Open & Close *2	Flicker*2	Hold H button for 6s, jog twice to show the motor RF control is inactive; Hold H button for 2s, the RF control is active again
Direction Reverse	Hold for 10s	Open & Close *3	Flicker*3	All settings saved after direction reversed
Reset	Hold for 16s	Open & Close *4	Flicker*4	All settings deleted

a. Pairing Motor with Controller


Way 1: Before adding a new controller

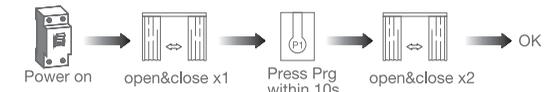

Way 2: After motor is powered on for more than 10s

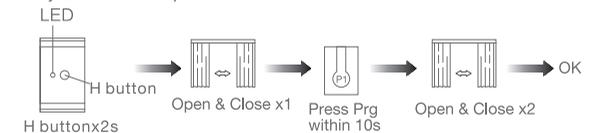

Way 3: Power on, add controller B via pre-existing controller A

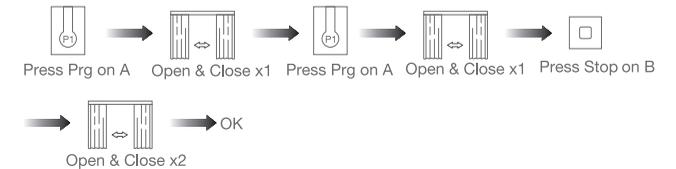

Note: Pairing can not be done under group channel or 0 channel.

b.Direction Reverse

Correct




If the limits are not set, and direction goes opposite.



Fav & Stop x2s → Open & Close x1


If limits are set and direction goes opposite.

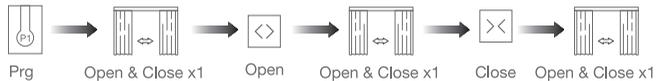

→ OK


Note: Do reverse the direction when it goes opposite.

c.Automatic Open & Close Limits Setting

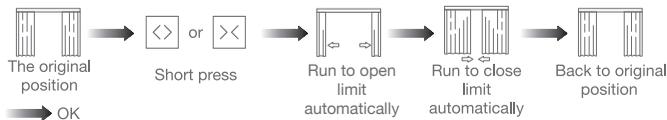

→ OK

d.Deleting Open & Close Limits

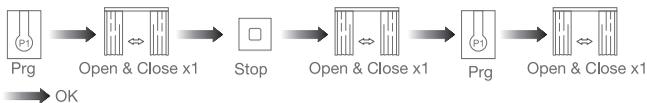

→ OK


Note: Delete the limits and reset limits after the curtain fabric or track changed

e.Setting and Cancelling Favorite Position

Setting




Cancelling

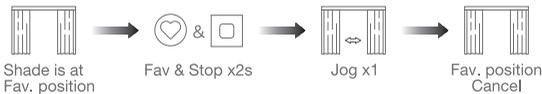

You can delete the favorite position by repeating the above operation


Note: The Fav. position must be set after open&close limits set

f.Hot key to the Fav. Position

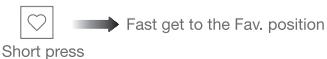

Short press

g.Adjusting Motor Speed

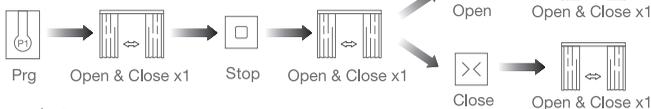


→ Speed increase

→ Speed decrease

Note: If motor doesn't respond, the max/min speed has already been reached. There are 3 speeds adjustable.

h.Removing Controllers

Remove a single controller

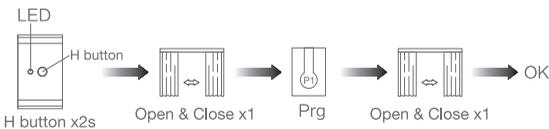


Remove controller B via pre-existing controller A



→ Controller B removed

Open & Close x1

Remove all controllers:

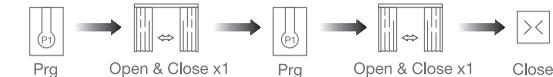

→ All controllers removed

Open & Close x1

Note: All the settings are saved even controllers removed (limits set are saved. Controller A/B are already paired to motor)


i.Adjusting Open & Close Limits




→ Motor runs automatically to set open&close limits

Note: After the motor runs for a long time, if it does not close well or the stall protection well, please do this adjusting limits operation.

j.Cancelling Limits

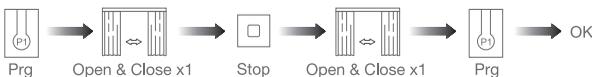

k.Turn On/Off Manual Control Function

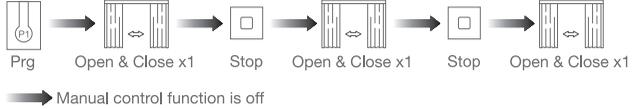


→ Manual control function is off

Note: a.You can turn on/off manual control function by repeating the above operation
b.Manual control function is on by factory default
c.When the manual control function is on, hand-pull the curtain, the curtain will automatically start running in the direction of pulling.

l.Open/Close Limits Setting Manually

Setting open limit

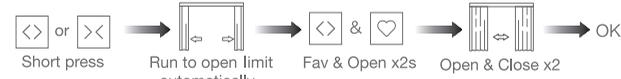

Note: Repeat the above to delete the open limit.

Setting close limit



Note: Repeat the above to delete the close limit.

05 Troubleshooting

Fault	Cause	Solution
Motor works but curtain fabric doesn't run	Curtain track installed correct or not	Check and adjust loose fit of track&belt
Remote controller doesn't work	Controller run out of battery	Replace the battery
Motor doesn't work while controller indicator blinks	Motor and controller not paired	Pairing controller&motor
Curtain gap too big while close	Accessories such as belt changed the close limit; or open/close limit reset by manual setting	Delete open/close limits and reset new open/close limits
Cannot pull the curtain fabric by manual	Manual control function is off	Turn on manual control function by controller setting
Orange LED flickers 8 times	Low battery	Charging